 




Craftsman Model 315.10721 Cord Replacement

This guide will show the proper steps for replacing the power cord on the Craftsman Model 315.10721.

Written By: Riley Hilliker

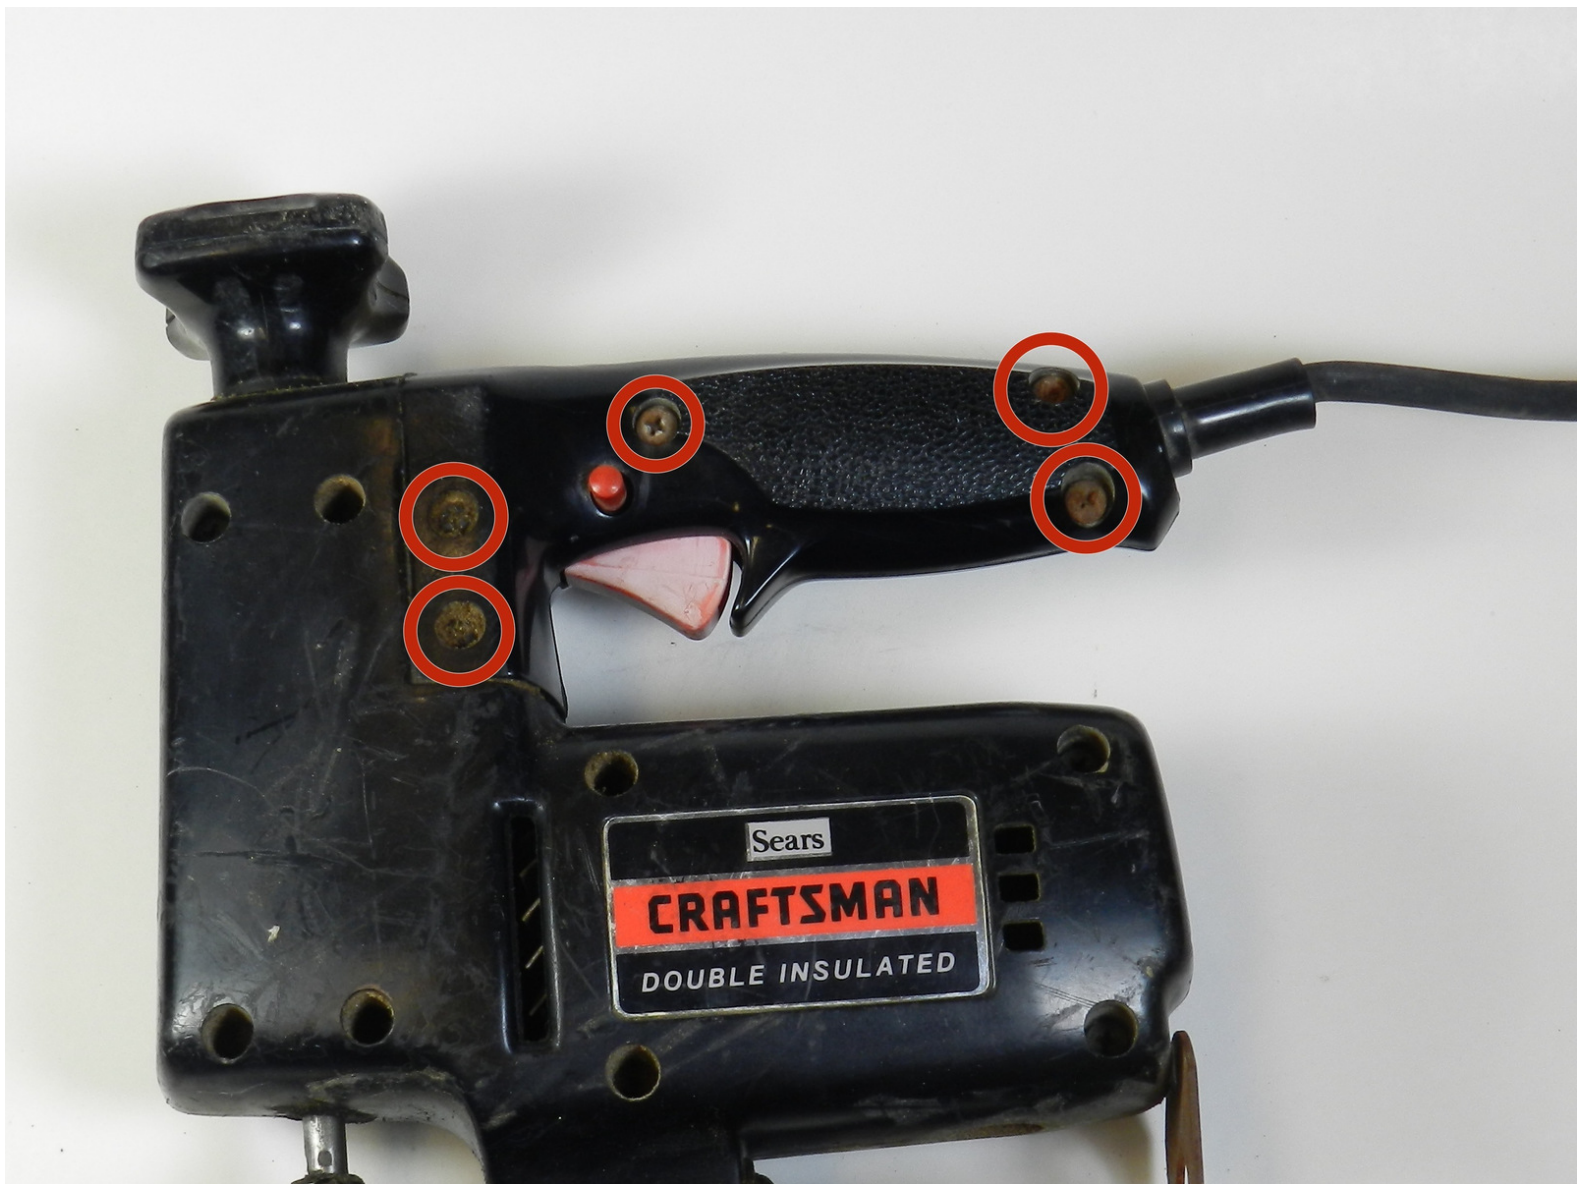

INTRODUCTION

WARNING: Once the power cord has been identified as the item that needs replacement, make sure that the device is disconnected from any power supply.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Craftsman Power Cord](#) (1)

Step 1 — Cord



 
- Remove the two 1" Phillips screws using a #1 Phillips screwdriver.
- Remove the three 1/2" Phillips screws using a #1 Phillips screwdriver.
- Once the five screws are removed, lift the handle cover from the saw.
- ⓘ Each screw has a corresponding nut on the opposite side of the power saw

Step 2



- Remove the 1/2" Phillips screw that is securing the switch using a Phillips #1 screwdriver.

Step 3

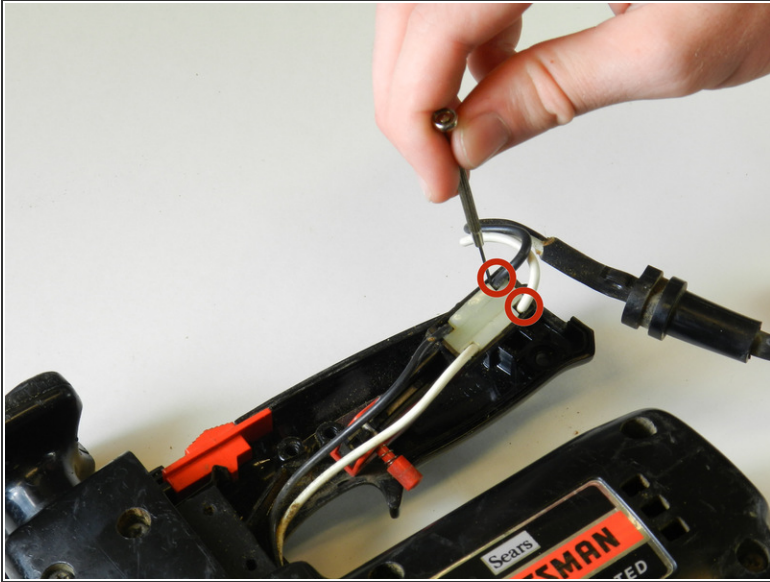

- Using a Phillips #00 screwdriver or a small diameter screwdriver, gently insert it into the leads. When the screwdriver is inserted into the lead, it will release the wire.
- ⓘ The leads are where the black and white wires from the power cord are plugged in.
- Release both the black and white wires and gently pull them from the leads.
- ✦ To install the new cord, insert the wires of the new cord in the same way that they were removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 06:20:17 PM.